

Installation Instructions

Auto Close Hinges

1. Position hinges in location to check that unit will function as intended. The Spring Hinge is positioned at the top. Ensure the hinge barrel is overhanging the edge of the gate. Mark screw locations.
2. Mark and drill 3mm pilot holes and fasten hinges using screws provided.
3. Fasten hinges to post. To Adjust Tension:
 - Higher: Insert 5/32" hex key into barrel hole and turn clockwise- maximum 5 clicks.
 - Lower: Depress 5/32" hex key into barrel hole to disengage ratchet and rotate anti-clockwise.
4. Install locking safety screw.