

## Installation Instructions

# Ball Bearing Strap Hinge

1. Position hinge butt on post and hinge strap on gate rail and mark centres for screw holes.
2. Ensure that hinge is at a right angle.
3. Drill 5.5mm pilot holes for screws to ensure a neat and secure job.
4. Fix hinge butt to post and hinge strap to rail.
5. After installation the hinges must be lubricated. Pack barrel with petroleum, jelly or grease.
6. Oil regularly when in use.