

## Installation Instructions

### Gate Springs

1. Position spring diagonally (corner to corner) with adjusting pin holes to top right hand side.
2. Fasten locating lugs with screws provided using a No.2 Phillips bit at 1,000 RPM (alternatively you can use a standard screwdriver). Mark holes for screws, drill 3.5mm pilot holes and fasten using screws provided and a Phillips head screwdriver.
3. Fasten top bracket first, then the bottom, making sure both brackets are close to edge.
4. To tighten spring place winding pin into one of the pin holes and turn to the left, then insert stop pin.

*Warning: castings should not be struck with a hammer.*