

Installation Instructions

Spring Latch

1. A stop must be fitted to the gate post. See diagram A.
2. When fitted the spring loaded bolt must project at least 19mm past the latch keeper. See diagram B.
3. Use the round head screws for the latch and the counter sunk screws for the spring loaded bolt.
4. Where your Zenith Spring Loaded Gate Latch is installed with a metal gate and fence, fix with suitable self tapping screws or rivets - do not weld.

