

Installation Instructions

Ball Bearing (& Mini) Steel Gate To Steel Post

- 1. Position hinge on gate and check that the unit will function as intended.
- 2. Weld hinges to gate.
- 3. Weld hinges to post.