

## Installation Instructions

# Colonial Ring Pulls

### FIXED PULL

1. Position Ring Pull in desired location.
2. Fit unit to gate using self-drill screws with a No. 2 Phillips bit at 1,000 RPM (alternatively you can use a standard screwdriver). Mark holes for screws, drill 2.5mm pilot holes and fasten using screws provided and a Phillips head screwdriver.

### REPLACEMENT LATCH

1. Remove old gate latch and spindle.
2. Insert new spindle into latch and ring pull.
3. Attach new ring pull using screws provided.